

creativeWorks™

NEST SWING

SAFETY & TREE OR SWING SET INSTALLATION INSTRUCTIONS



IMPORTANT!

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS, KEEP FOR FUTURE REFERENCE

CAUTION! CHOKING HAZARD – SMALL PARTS, NOT FOR CHILDREN UNDER 3 YEARS.

WARNING! MAXIMUM WEIGHT SHOULD NOT EXCEED 330LBS.(149.6KGS).
DO NOT USE WITHOUT ADULT SUPERVISION! ADULT ASSEMBLING REQUIRED!

ESSENTIAL INFORMATION

- Recommended for children 3+ years
- Do not leave child unattended while in use
- Good safety practices should be followed at all times
- Tools Required (included in the packaging)

Intended solely for family and domestic use, not for a commercial playground or daycare.
Two adults needed for assembly. Maximum weight capacity for swing: 330 LBS (149.6KGS).

IT IS IMPORTANT FOR ADULTS TO INSTRUCT CHILDREN TO:

- Dress appropriately while using the swing (avoid ponchos, scarves, and other loose-fitting clothing that is potentially hazardous)
- Sit in the center of the swing with full weight on the seat if swinging alone
- Avoid swinging empty seats

IT IS IMPORTANT FOR ADULTS TO INSTRUCT CHILDREN NOT TO:

- Walk close to, in front of, behind, or between moving items
- Twist ropes or loop them over the top support bar since such action may reduce the strength of the rope
- Get off the swing while it is in motion
- Climb on the swing when it is wet.
- Attach additional items to the swing that might cause a strangulation hazard.
- Wear a bicycle or sport helmet while on the swing.

HOW TO MAINTAIN YOUR NEST SWING

AT THE BEGINNING OF THE EACH PLAY SEASON, ADULTS SHOULD:

- Tighten all hardware.
- Check all protective coverings on pipes, edges, and corners, Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seat, ropes for wear, rust, or other deterioration, Replace as needed. The hardware used for this swing can be found at local hardware store.
- Check metal parts for rust, if found, repaint using a non-lead-based paint meeting the EN71 requirements.
- If the swing is hung from swingset frame, then lubricate all metallic moving parts, that are attached by a metal connection.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials (such as mulch or sand) to prevent compaction and to maintain appropriate depth (Min amount is 25cm), replace as needed.

TWICE A MONTH DURING PLAY SEASON, ADULTS SHOULD:

- Tighten all hardware
- Check all protective covering on pipes, edges and corners, Replace if they are loose, cracked, or missing.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials (such as mulch or sand) to prevent compaction and to maintain appropriate depth. (Min amount 25cm) Replace as needed.

AT THE END OF EACH PLAY SEASON, OR WHEN THE TEMPERATURE FALLS BELOW 4°C ADULTS SHOULD:

- Remove the swing from its outdoor location.
- Store the swing in a dry environment.

DISPOSING OF THE SWING

To dispose of the swing, first disassemble it, Dispose of it in such a way that no unreasonable hazards will exist at the time that the swing is discarded. This conforms to EN71, Consumer safety performance specification for home playground equipment.


INSTALLATION

1. Do not install swing over concrete, asphalt, packed earth, or any other hard surface.
2. Confirm that the supporting structure is secure, it will support at least 600 pounds, is over level ground, has a minimum height of 7ft. and is no less than 6 ft. on all sides from vertical elements. Nest swing should have a clearance of at least 1.5 x the total length of all the rope measured from the tree limb/horizontal beam to the attachment point (figure 2).
3. **TREE LIMB ASSEMBLY** — Test tree limb to ensure that it will hold the weight limit of 600 lbs. safely. Wrap tree straps around the tree limb (figure 1). Use the 2 carabiners to connect the O-rings attached to the rope to the D-rings of the tree straps. The bottom of swing should be no more than 24" and no less than 18" from the ground.
4. **SWING SET ASSEMBLY** — Attach the nest swing to a swing set by removing two sets of swings from the existing swing set and attach the upper metal O-rings to the chain support hook using the included carabiners for either a single or dual point attachment (figures 3 & 4). Allow 1.5x the total length of the rope to the metal O-ring of clearance on each side of the swing from stationary objects or other swinging elements of any kind. The bottom of swing should be no more than 24" and no less than 18" from the ground.

(FIGURE 1)



 
(FIGURE 2)

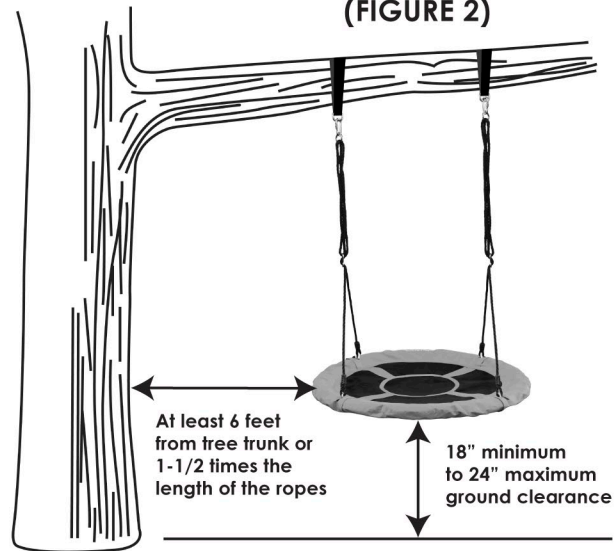

(FIGURE 3)



 (FIGURE 4)

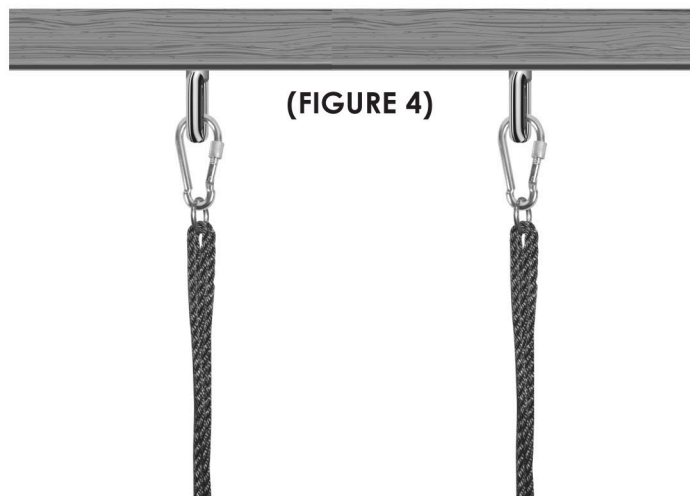

INCLUDED PARTS



2 TREE STRAPS



2 CARABINERS



1 SWING WRENCH



SAFETY WARNINGS:
PLEASE READ BEFORE USING PRODUCT

CAUTION:

Use only under adult supervision.
Do not leave child unattended while in use.

FOR QUESTIONS IN THE USA:

1-888-367-7373

help@myproduct.care

MODEL #: SP-2647B • ITEM #: 55880

AGES
3+