

User Manual

Manual del usuario

AMBIANO

PERSONAL DRINK MIXER

MEZCLADORA DE BEBIDAS PERSONALES



English.....06
Español19



Product Info
Información
del producto



www.aldi.us

+ VIDEO

QR codes take you where you want to go quickly and easily

Whether you require **product information, spare parts** or **accessories**, details on **warranties** or **after sales services**, or if you want to watch a **product demonstration video**, our QR codes will take you there in no time at all.

What is a QR code?

A QR code (QR = Quick Response) is a type of matrix that can be read with a smartphone camera and that contains a link to a website or contact details, for example.

Advantage: You do not need to manually enter a website address or contact details.

How it works

To scan the QR code, all you need is a smartphone with QR code reader software and an internet connection.

This type of software can be downloaded for free from your smartphone's app store.

Try it out now

Just scan the QR code with your smartphone and find out more about the ALDI product you have purchased.

Your ALDI Service Portal

All details mentioned above can also be found in the ALDI Service Portal at www.aldi.us.

s




Depending on your smartphone plan you may be charged for the connection.


Contents

Overview	4
Use.....	5
Package contents/device parts.....	6
General information.....	7
Reading and storing the user manual	7
Explanation of symbols	7
Safety	8
Proper use.....	8
Safety instructions.....	8
First use.....	12
Checking the drink mixer and package contents	12
Basic cleaning.....	13
Setting up the drink mixer	13
Use.....	13
Preparing and adding food	13
Attaching the drinking cup and blending.....	14
Removing the drinking cup	15
Cleaning.....	15
Storage	17
Troubleshooting.....	17
Technical data	18
Disposal.....	18
Disposing of the packaging	18
Disposing of the drink mixer	18


A

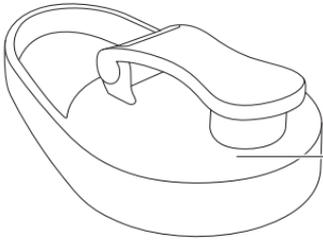


1

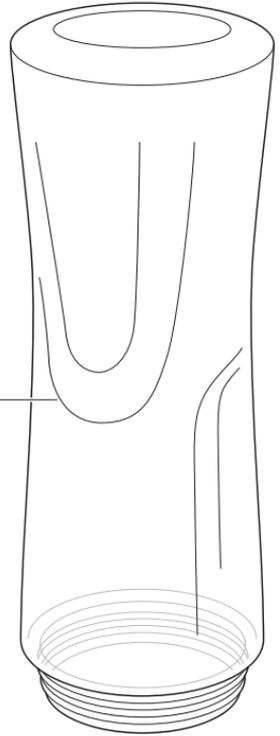





2

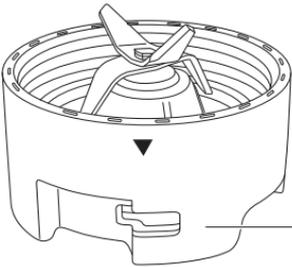

3

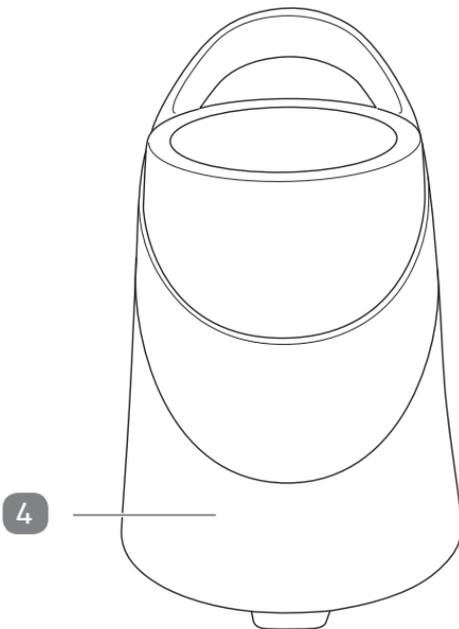

4

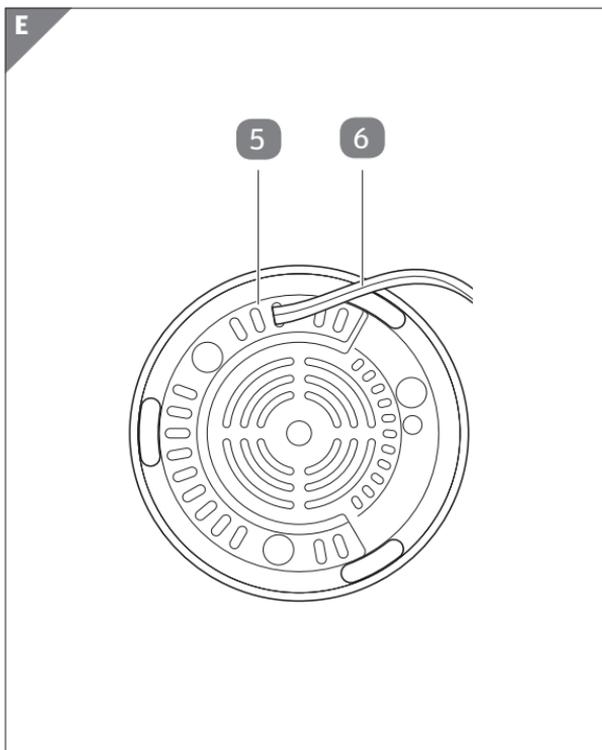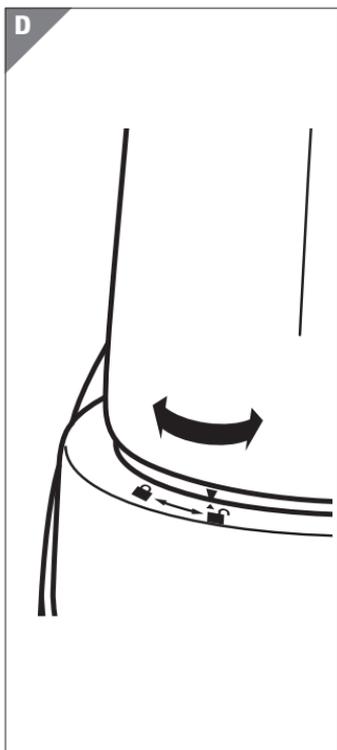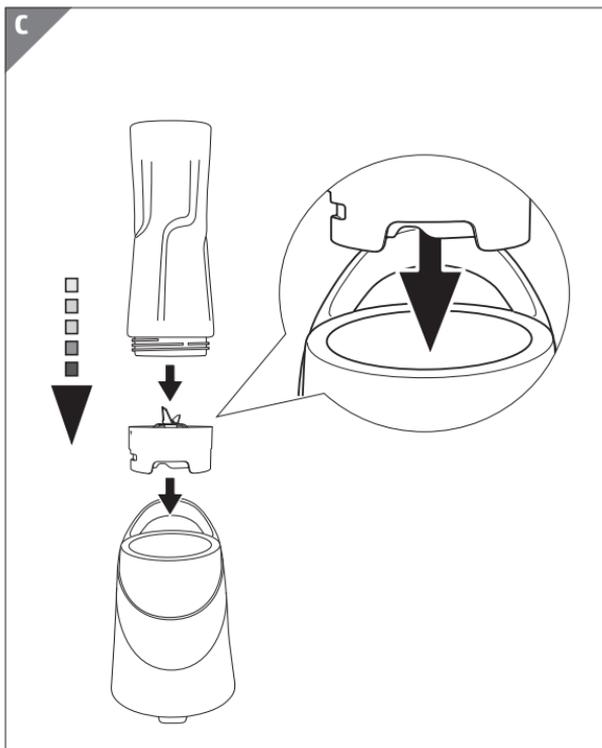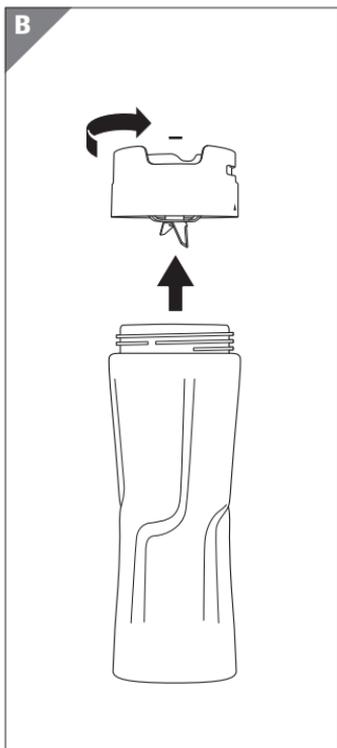

Package contents/device parts

- 1 Drinking cup lid, 2×
- 2 Drinking cup (20 oz, with printed measuring scale), 2×
- 3 Blade assembly
- 4 Motor unit
- 5 Cord guide
- 6 Power cord

General information

Reading and storing the user manual



This user manual accompanies this personal drink mixer (hereafter referred to as the “drink mixer”), and contains important information on setup and handling.

Before using the drink mixer, read the user manual carefully. This particularly applies to the safety instructions. Failure to do so may result in personal injury or damage to the drink mixer.

Store the user manual for further use. Make sure to include this user manual when passing the drink mixer on to third parties.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the drink mixer or on the packaging.



WARNING!

This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



CAUTION!

This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.

NOTICE!

This signal word warns of possible damage to property.



This symbol provides you with useful additional information on handling and use.



This material is suitable for contact with food.



Protection class II.

Safety

Proper use

The drink mixer is exclusively designed for making smoothies, shakes, mixed drinks, and crushing ice. It is not suitable for mixing hot liquids. The drink mixer is only intended for private use and is not suitable for commercial purposes.



A smoothie is a thick blended beverage, normally pureed in a blender using fresh or frozen fruits or vegetables. They can also contain liquid ingredients such as water, juice, milk, yogurt etc.

Only use the drink mixer as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

Safety instructions

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following.

Read all instructions.



Risk of electric shock!

A faulty electrical installation, excessive line voltage, or incorrect operation may result in an electric shock.

- Only connect the drink mixer if the line voltage of the outlet corresponds to the data on the rating plate.
- **To protect against risk of electrical shock**, do not immerse the motor unit, or the power cord in water or other liquids.
- Only connect the drink mixer to an easily accessible outlet so that you can quickly disconnect it from the power supply in the event of a problem.
- Do not use the drink mixer if it is damaged or if the power cord or plug is defective.

-
- Do not open the housing; instead, have a qualified professional perform repairs. Contact a qualified workshop for this. Liability and warranty claims are waived in the event of repairs performed by the user, improper connection or incorrect operation.
 - If the power cord of the drink mixer is damaged, the manufacturer, the customer service team or a person with similar qualifications must replace it to avoid risks.
 - Only parts that comply with the original device data may be used for repairs. This device contains electrical and mechanical parts which are essential for providing protection against sources of danger.
 - Do not use the drink mixer with an external timer or separate remote control system.
 - Never touch the power plug with wet or damp hands.
 - Do not pull the power plug out of the outlet by the cord; instead, always pull it out by the plug itself.
 - Never move, pull, or carry the drink mixer by its power cord.
 - Keep the drink mixer and the power cord away from open flames and hot surfaces.
 - Lay the power cord so that it does not pose a tripping hazard.
 - Do not kink the power cord and do not lay it over sharp edges.
 - Only use the drink mixer indoors. Do not use the drink mixer in damp rooms or in the rain.
 - Do not place the drink mixer such that there is a risk of it falling into a tub or sink.
 - Never reach to retrieve an electrical device if it has fallen into water. In such a case, immediately disconnect the power plug.

- Always switch the drink mixer off and unplug it when you are not using it, when you intend to clean it, or in the event of a malfunction.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- Never insert any objects into the housing.
- Only use original accessories with the drink mixer. The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.



Danger for children and persons with impaired physical, sensory or mental capacities (e.g., partially disabled persons, older persons with reduced physical and mental capacities) or lack of experience and knowledge (e.g., older children).

- This drink mixer may be used by persons with impaired physical, sensory or mental capacities or those lacking experience and knowledge if they are supervised or have been instructed in how to safely use the drink mixer and have understood the risks associated with operating it.
- Children may not use the drink mixer. Keep children away from the drink mixer and power cord.
- Children may not play with the drink mixer. Cleaning and user maintenance must not be performed by children.
- Do not leave the drink mixer unattended while in use.
- Make sure that children do not play with the plastic wrapping. They may get caught in it when playing and suffocate.

-
- Keep children away from small parts. Children can swallow small parts and choke.



Risk of injury!

Improper handling of the drink mixer may result in injury.

- Blades are sharp. Handle carefully.
- The drink mixer must always be unplugged when not in use, before assembly, disassembly, or cleaning.
- Always unplug the drink mixer when changing the accessories.
- **Avoid contacting moving parts.**
- **Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the drink mixer. A scooper may be used but must be used only when the drink mixer is not running.**
- **Always operate the drink mixer with cover in place.**
- **Do not blend hot liquids.**
- Observe the additional notes in the chapter “Cleaning”.

NOTICE!

Risk of damage!

Improper handling of the drink mixer may result in damage to the drink mixer.

- Place the drink mixer on an easily accessible, level, dry, heat-resistant and sufficiently stable work surface. Do not place the drink mixer on the edge of the work surface.
- Never place the drink mixer on or near hot surfaces (stove tops, etc.).
- Ensure that the power cord does not come into contact with hot parts.

- Never expose the drink mixer to high temperatures (heaters etc.) or to the effects of the weather (rain etc.).
- Stop using the drink mixer if its plastic parts exhibit cracks or breaks or are deformed. Only replace damaged parts with corresponding original spare parts.
- The drink mixer is designed for short operation not exceeding 1 minute. Let the drink mixer cool off completely before using it again.
- Never attempt to clean the motor unit of the drink mixer by immersing it in water and do not use a steam cleaner to clean it. Otherwise, you could damage the drink mixer.
- Never place the motor unit of the drink mixer in the dishwasher. It would be destroyed as a result.

SAVE THESE INSTRUCTIONS

First use

Checking the drink mixer and package contents

NOTICE!

Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointed object, you may quickly damage the drink mixer.

- For this reason, be very careful when opening it.
 1. Take the drink mixer out of the packaging.
 2. Check to make sure that the delivery is complete (see **Fig. A**).
 3. Check whether the drink mixer or individual parts are damaged. If this is the case, do not use the drink mixer. Contact the manufacturer via the service address indicated on the warranty card.

Basic cleaning

1. Remove the packaging material and all plastic wrappings.
2. Clean all parts of the drink mixer before first use as described in the chapter “Cleaning”.

Setting up the drink mixer

1. Unwind the power cord **6** to the desired length (see **Fig. E**).
2. Put the power cord through the cord guide **5**.
3. Place the motor unit **4** on a level and stable surface.
Make sure that the surface is easy to clean, well-lit, and easily accessible.

Use

Preparing and adding food

NOTICE!

Risk of damage!

Improper handling of the drink mixer may result in damage to the drink mixer.

- Never add a hot liquid to the drinking cups.
- Do not overfill the drinking cup.
- If you would like to make crushed ice, fill the drinking cup with ice cubes to no more than $\frac{1}{3}$ of their capacity. Add approx. 2 tablespoons of water. Never start processing the ice cubes before adding water.
- To prevent damage to the blade assembly when making crushed ice, make sure the ice is evenly distributed in the drinking cup. When needed, take the drinking cup off of the motor unit, shake the contents to distribute them properly, and blend them again.



- Some recommended liquid ingredients to use when making your smoothies are apple or orange juice, milk or even yogurt.
- Some liquids increase in volume and froth during blending e.g. milk, so do not overfill and ensure the blade assembly is correctly fitted.

1. Peel, pit and remove seeds from fruit and vegetables.
Preferably, you should use soft, fresh fruit or vegetables.
2. Cut the food into small pieces, about ½ inch (approx. 1.3 cm).
3. Add the prepared food to the drinking cup **2**.
4. Add the required liquid ingredients to the drinking cup.
Make sure you do not overfill the drinking cup. The drinking cups have a measuring scale printed on them for your convenience.

Attaching the drinking cup and blending



Risk of injury!

Improper handling of the drink mixer may result in injury.

- The blades are very sharp. Be careful when handling the blade assembly.

NOTICE!

Risk of damage!

Improper handling of the drink mixer may result in damage to the drink mixer.

- The drink mixer is designed for short operation not to exceed 1 minute. Let the drink mixer cool off completely before using it again.
 - Do not use the drink mixer to chop dry and hard food (nuts, coffee beans etc.). Otherwise you could damage the bearing and the blades.
1. After filling the drinking cup **2** with ingredients, screw the blade assembly **3** onto the drinking cup by turning it clockwise. Make sure the blade assembly has been securely fastened (see **Fig. B**).
 2. Turn the drinking cup, with the blade assembly attached, upside down. Align the arrow on the side of the blade assembly with the unlocked lock symbol on the motor unit **4** (see **Fig. C**).

3. Use a small amount of force to push the drinking cup down securely into the motor unit and then turn it clockwise until the arrow mark on the blade assembly points to the closed lock symbol (see **Fig. D**).
4. Plug the drink mixer into a properly installed outlet to turn it on and start blending the ingredients.
5. To turn off the drink mixer, unplug it.

Removing the drinking cup



Risk of injury!

Improper handling of the drink mixer may result in injury.

- The blades are very sharp. Be careful when handling the blade assembly.



The drinking cups can also be used as to-go cups. Simply screw on the included drinking cup lid and take your beverage with you.

1. Turn the drinking cup **2** counterclockwise, until the arrow mark on the blade assembly **3** points to the open lock symbol.
2. Remove the drinking cup from the motor unit **4** and turn the drinking cup over.
3. Unscrew the blade assembly from the drinking cup by turning it counterclockwise.
4. Pour your beverage into a glass or screw the drinking cup lid **1** onto the drinking cup, and enjoy!

Cleaning



Risk of injury!

Improper handling of the drink mixer may result in injury.

- Before cleaning the drink mixer, always unplug it.
- The blades are very sharp. Be careful when handling the blade assembly.

NOTICE!

Risk of short circuit!

Water or other liquids that have penetrated the housing may cause a short circuit.

- Make sure that no water or other liquids penetrate the motor unit of the drink mixer.
- Never immerse the motor unit of the drink mixer in water or other liquids.

NOTICE!

Risk of damage!

Improper handling of the drink mixer may result in damage to the drink mixer.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. They could damage the surfaces.
- Do not put the motor unit of the drink mixer in the dishwasher, as this will destroy it.



- Clean the drink mixer after each use.
- Foods or fruits containing acid could cause the plastic to discolor. Discoloration is normal and does not indicate damage.

1. Unplug the drink mixer before cleaning.
2. Let the drink mixer cool off completely.
3. Clean the motor unit **4** with a damp cloth and a small amount of dish soap.
4. Clean the drinking cups **2**, the blade assembly **3** and the drinking cup lid **1** with warm water and a small amount of dish soap. They may also be cleaned in a dishwasher, provided they are only loaded in the top rack.
5. Use a cloth or soft brush to remove any dirt and dust from the vents of the motor unit.
6. Wipe all parts completely dry.

7. Tie up the power cord **6** properly and store the drink mixer for future use (see chapter “Storage”).

Storage

1. Make sure the drink mixer is unplugged.
2. Clean the drink mixer as described in the chapter “Cleaning”.
3. Store the drink mixer and the accessories in a dry, frost-free location out of the reach of children. We recommend that you store the drink mixer in its original packaging or cover it with a suitable cloth to protect it from dust.

Troubleshooting

Problem	Possible cause	Solution
The drink mixer doesn't turn on.	The motor unit 4 is not plugged in.	Plug the motor unit into an electrical outlet.
	The drink mixer has not been properly assembled.	Check to make sure that you have properly assembled the drink mixer and that the drinking cup 2 is correctly attached and locked into place.
The drink mixer is working, but the food is not being sufficiently blended.	The drink mixer is overfilled.	Unplug the motor unit from the electrical outlet. Detach the drinking cup from the motor unit and remove some of the contents from the drinking cup. Alternatively, you can also shake the closed drinking cup by hand.
	There is not enough liquid to blend the ingredients.	Fill at least half of the drinking cup with liquid ingredients.

Technical data

Model:	42860A1
Power supply:	120 V ~ 60 Hz
Output:	350 W
Protection class:	II
Weight:	2.65 lbs (1.2 kg)
Dimensions (W × D × H):	4.9 × 6.4 × 14.4 inch (125 × 162 × 365 mm)
Cable length:	47.2 inch (120 cm)
Material	
- housing:	ABS
- blades:	stainless steel #303 and #301
- bottles:	tritan, BPA free
Operating time:	max. 1 minute
Speed without load:	approx. 24,000 revolutions per minute
Product code:	95783

Disposal

Disposing of the packaging

- Sort the packaging before you dispose of it. Dispose of paperboard and cardboard with the recycled paper service and wrappings with the appropriate collection service.

Disposing of the drink mixer

- Should the drink mixer no longer be capable of being used at some point in time, **dispose of it in accordance with the regulations in force in your city or state.**
- Please ensure your recycling information applies to local regulations and the EPA recommendations (www.epa.gov).



DISTRIBUTED BY • DISTRIBUIDO POR:

ALDI INC., BATAVIA, IL 60510

WWW.ALDI.US

**AFTER SALES SUPPORT •
SERVICIO POSVENTA**

95783

  **1-888-367-7373**

 **help@myproduct.care**

MODEL/NO DEL MODELO:

42860A1

01/2018

3

**YEAR WARRANTY
AÑOS DE GARANTÍA**